



FC104 SERIES SPEAKER TRANSFORMER WIRING DIAGRAM




INSTALLATION INSTRUCTIONS

MODEL #
FC104

FREQUENCY RESPONSE
150Hz-17kHz

SENSITIVITY
94dB (1W/1M)

Installation must comply with all Building Codes and NFPA guidelines. Installation must adhere to N.E.C. and NFPA 70/72 wiring directives and comply with all National and Local Building Codes.

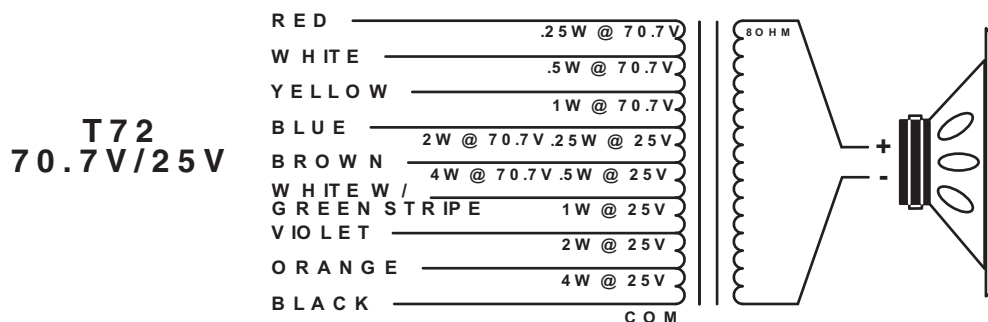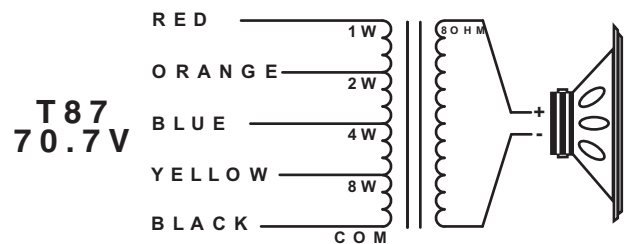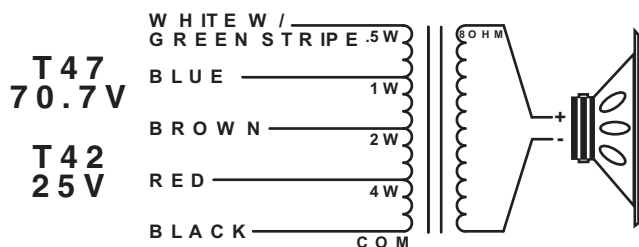

Speaker must be installed with UL Listed Baffles: 51-4. Speaker must be installed with UL Listed Enclosures: 96-4, 96-4X

Specifications are subject to change without notice



**Atlas
Sound**

AtlasSound.com

1601 JACK MCKAY BOULEVARD ENNIS, TEXAS 75119 U.S.A. • TELEPHONE: (800) 876-3333 • FAX: (800) 765-3435
©2005 ATLAS SOUND LP Printed in U.S.A. 00105 ATSS001890 RevB 01/05 PN 490201